EN
DE
FR
IT
ES
NL
PT
SW
DK
TU
PL
GR
RU

Home Theater

Amplifier Audio System

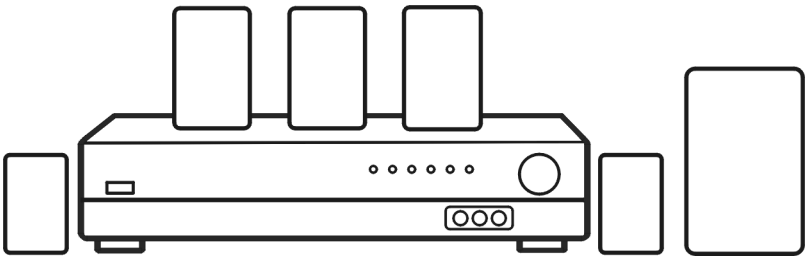

User Guide

82-136-00061

Identifying your Amplifier

Front Panel

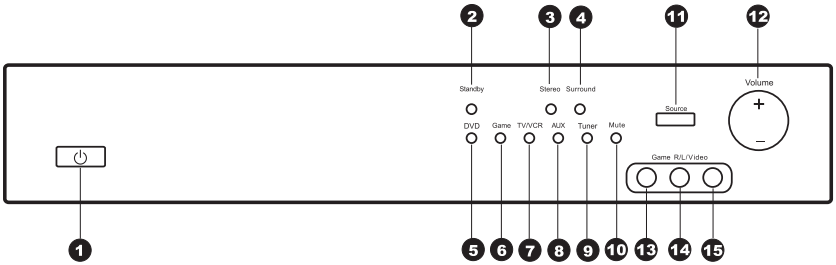

1. Power button
2. Standby indicator
3. Stereo indicator
4. Surround indicator
5. DVD indicator
6. Game indicator
7. TV/VCR indicator
8. AUX indicator
9. Tuner indicator
10. Mute indicator
11. Source button
12. Volume Up/Down button
13. Audio Input (RIGHT) connector
14. Audio Input (LEFT) connector
15. Video Input connector

Rear Panel

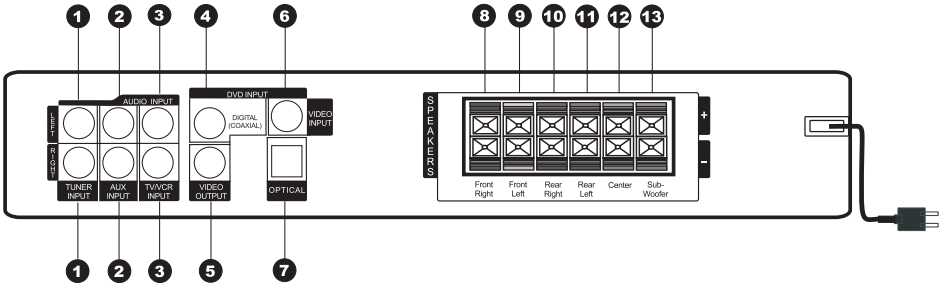

1. Tuner Input connectors
2. AUX Input connectors
3. TV/VCR Input connectors
4. Coaxial DVD Input connector
5. DVD Video Output connector
6. DVD Video Input connector
7. Optical DVD Input connector
8. Front Right Speaker terminals
9. Front Left Spearker terminals
10. Rear Right Speaker terminals
11. Rear Left Speaker terminals
12. Center Speaker terminals
13. Subwoofer Speaker terminals

Note: The layout of the panels are subject to change on revising.

Remote Control

1. Normal button--Default listening mode.
2. Jazz button--Press to listen to Jazz music sound effect.
3. Classic button--Press to listen to Classic music sound effect.
4. POP button--Press to listen to POP music sound effect.
5. Rock button--Press to listen to Rock music sound effect.
6. Dance button--Press to listen to Dance music sound effect.
7. Standby button--Press to switch the amplifier from POWER ON to STANDBY mode. (The main power of the amplifier must be ON at this time.)
8. Center Up/Down Volume button--Press to adjust center speaker's sound level.
9. Front Left Up/Down Volume button--Press to adjust Front Left speaker's sound level.
10. Front Right Up/Down Volume button--Press to adjust Front Right speaker's sound level.
11. Rear Left Up/Down Volume button--Press to adjust Rear Left speaker's sound level.
12. Rear Right Up/Down Volume button--Press to adjust Rear Right speaker's sound level.
13. Subwoofer Up/Down Volume button--Press to adjust Subwoofer speaker's sound level.
14. Default button--Press to restore customized settings to the factory default settings.
15. Test Tone button--Press to check the spearker connection.
16. Volume Up button--Press to raise all speaker's volume.
17. Stereo button--Press to output 2.1 channel sound.
18. Surround button--Press to output 5.1 channel sound.
19. Mute button--Press to turn off the sound. To restore the sound, press it again.
20. Volume Down button--Press to lower all speaker's volume.
21. Coaxial DVD button--Press the button when your amplifier connects to the DVD player via coaxial cable.
22. Optical DVD button--Press the button when your amplifier connects to the DVD player via optical cable.
23. Game button--Press to select the TV Game or Video Camera as the input source.
24. Tuner button--Press to select the Tuner as the input source.
25. TV/VCR button--Press to select the TV/VCR as the input source.
26. AUX button--Press to select the AUX as the input source.
27. Night Mode button--Usually press to lower and balance the sudden burst loud voice of the input souce when playing the amplifier at night.

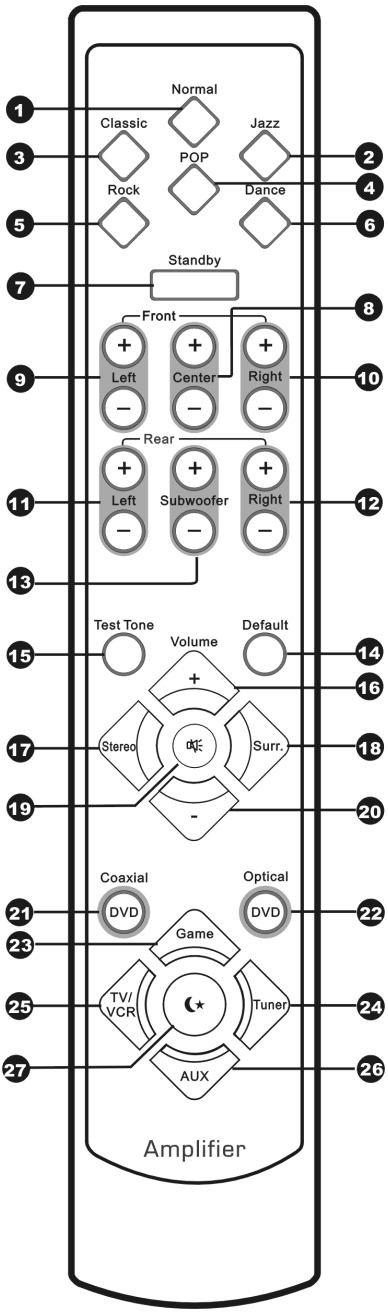

Using Amplifier

Before starting using the amplifier, please get ready all the audio devices that connect to the device first. Refer to the included *Amplifier Connection Diagram.*

Basic Operation

1. Press the **POWER** button on the main unit, the amplifier goes to **STANDBY** mode.
2. Press any button on the main unit or on the remote control, the amplifier goes to **POWER ON** mode.
3. Press the **POWER** button again to turn off the amplifier, or press on the **STANDBY** button on the remote control to keep the device in standby mode.

Test Tone Checking

1. Press the **TEST TONE** button when the amplifier is in **POWER ON** mode.
2. The amplifier will output a test tone to the 6 spearkers by turns.

Note: To stop the test tone, simply press any button on the remote control or on the main unit.

Input Source Selection

1. Press the **SOURCE** button on the amplifier repeatedly to select an input source, or
2. Press the individual **Optical DVD, Coaxial DVD, Game, TV/VCR, Tuner or AUX** buttons on the remote control to select the audio input source directly.
3. The corresponding indicator will light. (see the amplifier front panel).

Note: When the Optical DVD input is selected, the DVD indicator lights up. However, when the Coaxial DVD input is selected, both the DVD and Game indicator light up at the same time.

Volume Adjustment

1. Press the **VOLUME UP/DOWN** buttons to raise/lower **all** speaker's volume, or
2. Press the **Front Left Up/Down Volume button, Front Right Up/ Down Volume button, Center Up/ Down Volume button, Rear Left Up/Down Volume button, Rear Right Up/Down Volume button** and **Subwoofer Up/Down Volume button** to adjust the individual speaker's volume control.

Using Amplifier

Before starting using the amplifier, please get ready all the audio devices that connect to the device first. Refer to the included *Amplifier Connection Diagram.*

Equalizer Setting

Press the **NORMAL, CLASSIC, JAZZ, ROCK, POP or DANCE** buttons to select the tones you like for listening.

Note: The factory default setting is NORMAL.

Night Mode

1. Press the button on the remote control.
2. The Mute LED on the front panel of the amplifier will keep blinking.
3. The amplifier will automatically lower and balance the sudden burst loudness of the input souce before outputting it.
4. To cancel the function, press the button again.

Note: Usually this function is used when the amplifier is playing at night to prevent the unexpected loudness.

Mute

1. Press the **MUTE** button in **POWER ON** mode.
2. The Mute LED on the front panel of the amplifier will be lit. The sound is turned off.
3. To restore the sound, press any button on the amplifier or on the remote control.

Using Amplifier

Before starting using the amplifier, please get ready all the audio devices that connect to the device first. Refer to the included *Amplifier Connection Diagram.*

Stereo Mode

1. Press the **STEREO** button in **POWER ON** mode.
2. The amplifier will playback the input source from the **Front Left, Front Right** and the **Subwoofer** speakers.

Note: The amplifier will decode and playback whatever was recorded on the DVD or audio CD. If a stereo DVD (2 channel) is loaded, the amplifier will playback the disc according to its sound system automatically. That means the sound will come out of the 2 front speakers plus the subwoofer.

Note: If a Dolby Digital (5.1 channel) recorded DVD is loaded, press the **STEREO** button will force the amplifier to manually change and playback the disc as a stereo sound system and the sound will only come out of the 2 front speakers plus the subwoofer.

Surround Mode

1. Press the **SURROUND** button in **POWER ON** mode.
2. The amplifier will playback the input source from the 6 speakers.

Note: The amplifier will auto-detect and playback whatever was recorded on the DVD or audio disc. If a Dolby Digital recorded DVD (5.1 channel) is loaded, the amplifier will playback the disc according to its sound system automatically. That means the sound will come out of 5 speakers plus the subwoofer.

Note: If a stereo DVD disc (2 channel) or audio CD is loaded, press the **SURROUND** button will force the amplifier to manually change and playback the disc as a 5.1 channel surround system and the sound will come out of all 5 speakers plus the subwoofer.